

QuickClick

Air Relief

The provided air relief is designed to allow air to flow into the pail to counter a fully sealed condition, reducing the potential of a pail collapse. Vacuums rated above 125" of water lift may call for a second relief if the application results in repeated or extended duration sealed conditions. While a modest volume of air will flow through the relief, it will not detract from the effectiveness of the separator or significantly reduce the performance from the vacuum.



#42434



Cen-Tec[®]
Systems

Step-by-step Installation Guide



1 Drill a 1/2" hole in the lid of the separator bucket.



3 Push the threaded section of the air relief through the 1/2" hole with the sealing ring on the upper side of the lid.



2 Remove the threaded nut from the air relief.



4 Thread the nut onto the air relief on the underside of the lid until hand tight.